



QUICK SERVE-200

Owner's Manual

Congratulations on the purchase of your new **QUICK SERVE-200** dumbwaiter! You can expect many years of reliable service from your dumbwaiter. Below are some guidelines to ensure the utmost reliability and safe operation of your dumbwaiter.

- Never allow children to operate this dumbwaiter
- This is not a toy! Never, never allow children to play in or around the dumbwaiter or the doors which access the dumbwaiter.
- Although relatively maintenance free, it is recommended to have this unit serviced. See service schedule listed below.
- Unplug the run bug when installation is complete.
- Do not exceed the maximum weight capacity.
- Call for service if you hear any unusual noises.
- If the dumbwaiter becomes unresponsive or “stuck”:
 - Check all doors and access hatches. Ensure they are firmly closed.
 - Check power going to the unit. Check circuit breaker feeding the dumbwaiter.
 - Cycle the power at the disconnect or circuit breaker (turn unit off, wait 30 seconds, turn on)
 - If the above items do not work, call for service.

Operating instructions:

- All doors must be closed.
- Secure cargo and close car gate.
 - Use extra care to secure items which may shift or roll during transport
- Press desired floor level. You may call or send the dumbwaiter from any level, to any level.
- The red “In Use” light will illuminate on all levels when the dumbwaiter is moving.
- The green “Car Here” light will illuminate when the car is at a specific level.
- Gently pull door open, open car gate, and remove cargo.
- The door lock will remain unlocked while the car is at the specific level.

Recommended Service:

- Inspect all rails and rail joints for signs of loose bolts, fasteners, etc. Tighten as necessary
- Inspect all limit switches for signs of damage, loose bolts, etc. Tighten or replace as necessary.
- Inspect cable drum and cable for signs of damage, fraying, etc. Replace cable as necessary.
- Check all door locks for proper adjustment. This can be done by gently tugging on each door while the dumbwaiter is running. If the car stops while tugging on the door, adjust door lock.
- Rollers do not require lubrication, however, if a squeaking sound is heard, a light oil or spray silicon may be applied to the rollers to eliminate squeaking.
- Inspect and cycle safeties annually to ensure they stop and grab the rail, preventing the car from falling. (use caution not to allow cable to come off the drum while performing this service)
- Inspect all wires and wiring for signs of damage.

Service intervals are dependent on frequency of use:

After initial installation, it is recommended to have a service performed within the first 60 days or 60 trips. After the initial service, follow the guidelines listed below. Please note, these are *minimum* service intervals. Call for service if you hear any unusual noises.

<i>Type of Use</i>	<i>Annual Service Schedule</i>
Light Residential: ~1-5 trips per day	Annually- once per year
Heavy Residential: ~ 10-20+ trips per day	Bi- Annually- 2 times per year
Commercial Duty (not recommended):30++ trips per day	Monthly
Coastal/Corrosive Environment	Quarterly – 4 times per year